


# INSTALLATION - WALLS

## FIXED BATTEN SYSTEM

### T-CLIP SYSTEM

### TC 01

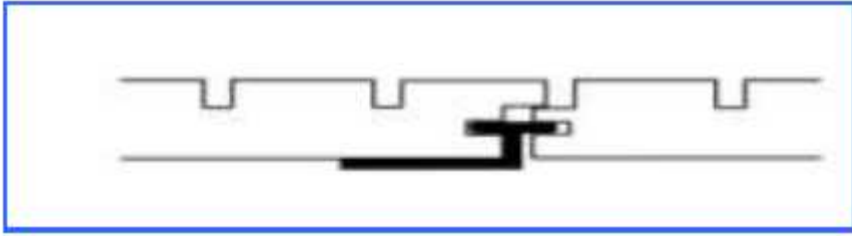


The T-CLIP by Woodcom GSV was designed to make installation of the **TAVILINE** plank very easy to install. The T-Clip system is very strong and secure.  
Standard sizes: 2400 x 192mm

1. Measure the room and distribute the plank.
2. Decide whether you want to install the plank vertically or horizontally.
3. Battens should be spaced out every 500 to 600 mm, transversally from the plank direction.
4. Starting from one side line up the T-CLIP in a line
5. Install the first plank, then followed by a T-Clip, once screwed in place another plank is placed next to it.
6. Because of the design of the T-CLIP the joint and the Clip is concealed.



### TONGUE AND GROOVE

### TG 04

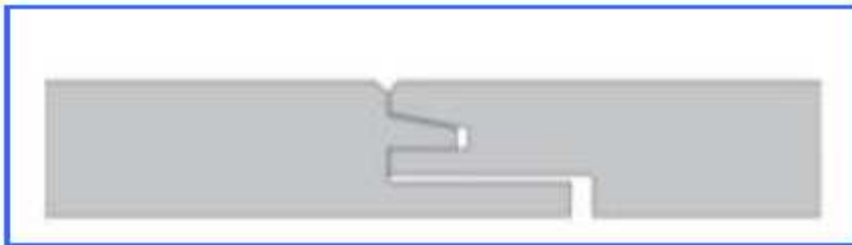

The tongue and groove profile makes fixing simple and fast.  
Standard sizes: 1200 x 600mm | 2400 x 600mm

1. Measure the room and distribute the plank.
2. Decide whether you want to install the plank vertically or horizontally.
3. Battens should be spaced out every 500 to 600 mm, transversally from the panels direction.
4. Starting with the groove edge against the wall, making sure the first panel is straight.
5. Install the first plank, once screwed in place another panel is placed next to it.
6. The installation is simple and fast

